


625-4175

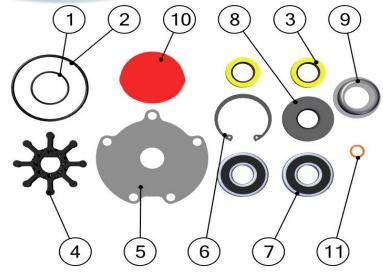


Description	BOM ID	Qty
625-1026	1	1
625-1145	2	1
625-4005	3	2
625-4011	4	1
625-4018	5	1
625-4077	6	1
625-4078	7	2
625-4079	8	1
625-4092	9	2
625-4265	10	1
90037SA-STCO	11	1



Step 1:

1) Using 1/2 socket remove bolts and washers.

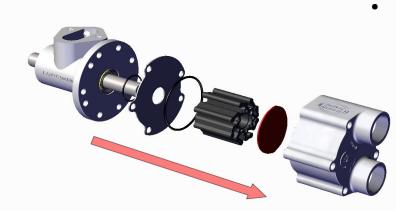


Step 2:

- 1) Remove housing, impeller, wear plates and o-rings.
- 2) Discard parts.




625-4175

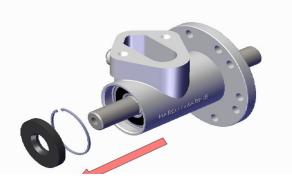


Step 3:

- 1) Use a screwdriver to remove the front seal.
- 2) Use snap ring pliers to remove snap ring.

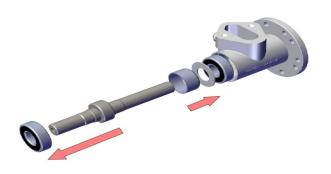

• Step 4:

- 1) Press shaft out of the housing.
- 2) Remove bearings and wear ring from the shaft and discard.

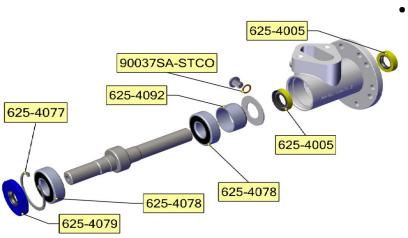

Step 5:


1) These are all the new parts for the front snout assembly.



625-4175


Step 6:

- 1) Remove both seals and clean the housing.
- 2) Make sure the seals are flush with the inside and back side of the bearing housing.
- 3) Install with the spring side of the seals to the outside of the housing.
- 4) Coat seals with petroleum jelly

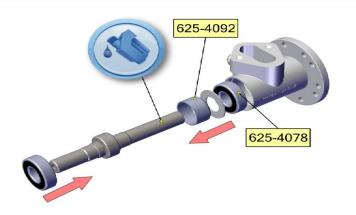

Step 7:

- 1) Slide new wear ring and washer from the rear of the shaft.
- 2) Press the new bearings on the shaft.
- 2) Coat bearings with grease and install shaft into the housing.

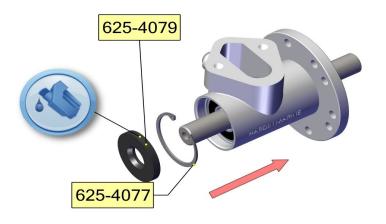


• Step 8:

- 1) Using snap ring pliers, install the new snap ring
- 2) Coat seal with petroleum jelly and install flush with housing.




625-4175

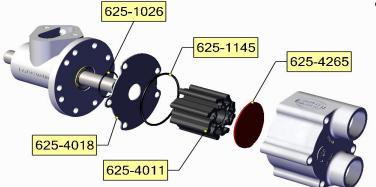


• Step 9:

1) This is the list of the new parts and the order of assembly.

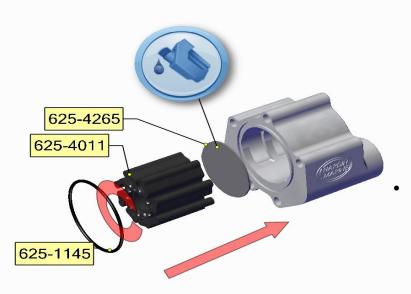

• Step 10:

- 1) Install rear plate into the housing. Coat with petroleum jelly.
- 2) Coat inside of housing with petroleum jelly. Install impeller into the housing. Rotate clockwise like shown for standard rotation engine, port side mounted sea pump.
- 3) Coat o-ring with petroleum jelly and install into the groove in the housing.

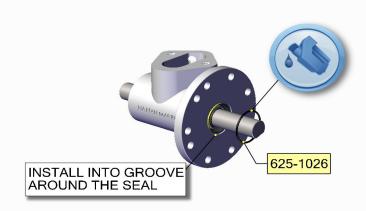

• Step 11:

1) Coat o-ring with petroleum jelly and install into the groove around the groove around the seal.

www.hardin-marine.com




625-4175




Step 12:

- 1) Slide wear plate over the shaft.
- 2) Make sure the impeller side of the wear plate is coated with petroleum jelly.
- 3) Install sea pump impeller housing.

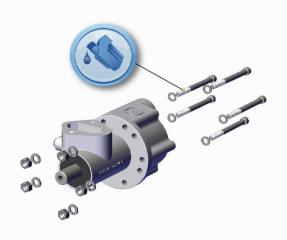

Step 13:

- 1) Apply anti-sieze to the bolts.
- 2) Using 1/2 socket install bolts and nuts. Once installed into the bracket torque to 20 ft. lbs..
- 3) The front of the sea pump is threaded for reinstalling sea pump pulley using the power steering pulley installer.

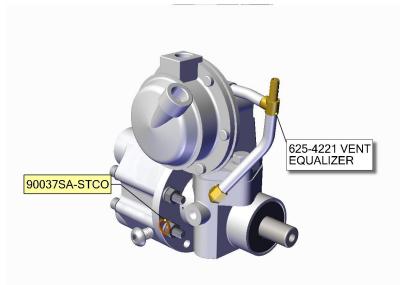

Step 14:

- 1) Fill cavity with Quicksilver High Performance Gear Lube until the lube pours out of the theads.
- 2) Using 7/32 hex socket install bolt with new copper washer.
- 3) Install fuel pump and vent equalizer.