

6. Adjust *Indicator Clamps* [1] and *Indicator Tube* [2] until *Ram* [4] is touching *Ram Stop* [8]. Minor adjustments can be made by moving *Indicator Tube* [2] in the *Indicator Clamps* [1].

7. Once final adjustments are made tighten *Socket Cap Screws* [9] and install *Socket Set Screws* [10] with provided locktite.

510 East Arrow Hwy San Dimas, CA 91773 (800) 899-8058 (909) 592-6162 www.imcomarine.com info@imcomarine.com

05-8061			
Item	Description	Qty	Part Number
1	Mercury Indicator Clamp	2	05-6016
2	Indicator Tube	1	05-6008
3	Indicator Cable Nut	1	05-6009
4	Indicator Ram	1	05-2038
5	Indicator Spring	1	05-6006
6	Spring Clip	1	05-6010
7	Tempory Spring Retainer	1	05-9001
8	Ram Stop	1	05-6018
9	10-24 x 1/2" Socket Cap Screw	4	08-060403042
10	10-24 x 3/16" Socket Set Screw	2	08-050403022